



AMBERLITE™ PWA5 Resin

Drinking Water Grade

Introduction

Nitrate Selective

AMBERLITE PWA5 resin is a strongly basic anion exchange resin, developed for selective nitrate removal from drinking waters. AMBERLITE PWA5 resin removes nitrate preferentially to sulfate, and therefore can yield operating capacity higher than conventional resins. These characteristics make AMBERLITE PWA5 resin the perfect choice for a simple, regenerable nitrate removal process for municipal water treatment.

AMBERLITE PWA5 resin is compatible with the Advanced Amberpack™ Municipal system.

Properties

Matrix	Cross linked copolymer
Physical form	Cream beads
Total exchange capacity	≥ 1.0 eq/L
Moisture holding capacity	52 – 58%
Shipping weight	690 kg/m ³ (43 lb/ft ³)
Particle size	
Screen grading	0.3 – 1.2 mm (16 – 50 mesh US Std Screens)
Fines content	<0.300 mm: 0.3% max

Suggested Operating Conditions

Maximum operating temperature	75 °C (170 °F)
Minimum bed depth	610 mm (24 inches)
Typical service flow rate	5 – 40 BV/h* (0.6 – 5 gpm/ft ³)
Regenerant (100% basis)	NaCl
Concentration	6 – 12%
Minimum level	80 g/L (5 lbs/ft ³)
Minimum contact time	20 minutes

Conditioning and limits of use

AMBERLITE PWA5 resin is suitable for use in potable water applications after performing a full regeneration cycle at a dosage of 120 g of NaCl per liter of resin followed by an adequate rinse to remove excess of brine.

The operating capacity of AMBERLITE PWA5 resin depends on the operating conditions and the feed water conditions.

Regulatory

AMBERLITE PWA5 resin is certified to ANSI/NSF Standard 61 for drinking water components. AMBERLITE PWA5 resin is approved for use in public water supplies in the UK. Please contact Dow Water & Process Solutions for additional certification information.

Hydraulic Characteristics

Figure 1 and Figure 2 show the pressure drop data for AMBERLITE PWA5 resin as a function of flow rate and water temperature. Pressure drop data are valid at the start of the service run with clean water and a correctly classified bed. Figure 3 and Figure 4 show the bed expansion of AMBERLITE PWA5 resin as a function of backwash flow rate and water temperature.

Figure 1 Pressure Drop (metric)

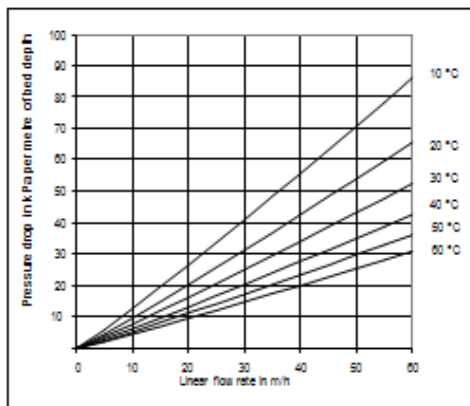


Figure 2 Pressure Drop (US units)

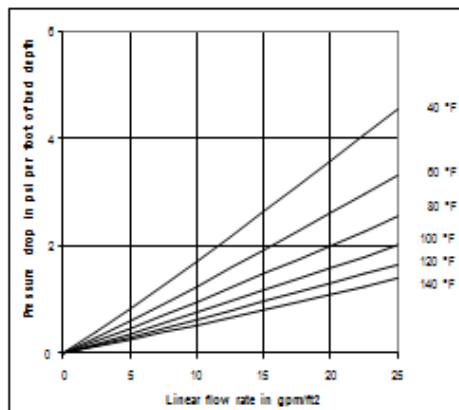


Figure 3 Bed Expansion (metric)


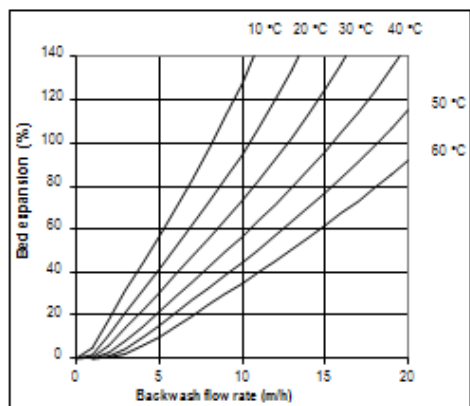


Figure 4 Bed Expansion (US units)

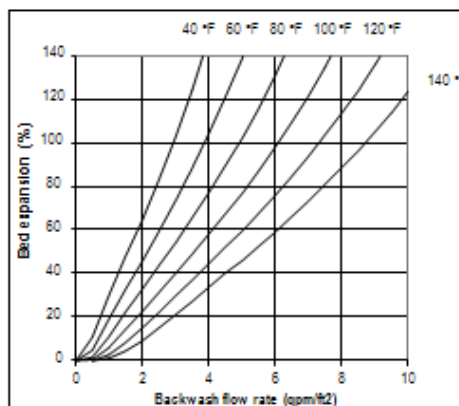

For more information about DOW™ resins, call the Dow Water & Process Solutions business:

North America: 1-800-447-4369
 Latin America: (+55) 11-5188-9222
 Europe: +800-3-694-6367
 Italy: +800-783-825
 South Africa: +0800 99 5078
 Pacific: +8007776 7776
 China: +400 889-0789

<http://www.dowwaterandprocess.com>

Notice: No freedom from infringement of any patent owned by Dow or others is to be inferred. Because use conditions and applicable laws may differ from one location to another and may change with time, Customer is responsible for determining whether products and the information in this document are appropriate for Customer's use and for ensuring that Customer's workplace and disposal practices are in compliance with applicable laws and other governmental enactments. The product shown in this literature may not be available for sale and/or available in all geographies where Dow is represented. The claims made may not have been approved for use in all countries. Dow assumes no obligation or liability for the information in this document. References to "Dow" or the "Company" mean the Dow legal entity selling the products to Customer unless otherwise expressly noted. NO WARRANTIES ARE GIVEN; ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY EXCLUDED.

